

INSTRUCTION SHEET

BERT/BRINN TRANSMISSION *XStorque* STARTERS (PART #9514)

ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal. NOTE: Be sure to use at least a 12 AWG wire for this jumper.
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



1833 Downs Drive - West Chicago, IL 60185

(800) 862-7223

INSTRUCTION SHEET

BERT/BRINN TRANSMISSION *XStorque* STARTERS (PART #9514)

ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal. NOTE: Be sure to use at least a 12 AWG wire for this jumper.
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



1833 Downs Drive - West Chicago, IL 60185

(800) 862-7223